

HDMI UTP Extender Model: PT-HT235P



1.Description

The HDMI extender provides extension of HDMI signals long distances over a single CAT6 cable, it supports high resolution up to 1080p, EDID copy function. The extender can use for a wide range of applications requiring long distance transmission of high resolution with high quality by its good stability and powerful security.

2.Features

- Transmits HDMI video and audio signals up to 50M over a single CAT6 cable;
- Support video resolution up to 1920*1080@60Hz, 3D signal;
- Support copy EDID, can match many kinds of display device;
- Compliance with HDMI 1.3 and HDCP 1.2 standard;
- Support POC unilateral power supply;
- High compatibility, can auto-match source and display device;
- Built-in automatic adjustment system, make the image smooth, clear and stable;
- · Simple to install, plug and play.

3.Package list









 


 
4.Specifications

Parameter		Description
	Standards	HDMI 1.3; HDCP 1.2
	Maximum pixel clock	165MHz
Video	Maximum data rate	6.75Gbps
	Resolution	1920X1080@60Hz, 3D
	Connector	HDMI-A
	Impedance	100Ω
Ethernet	Interface	RJ45
Ethernet	Transmission distance	CAT650M
	Power supply	The power adapter: DC 5-12V
	Power dissipation	MAX 3W
Other	Temperature	Operating: -5°C ~ +70°C
	Humidity	Operating: 5% ~ 90%
	Dimension	81*43*23mm
	The warranty	1 year free warranty

5.Panel

Transmitter:





Receiver:






Port name		Description	
	HDMI IN/HDMI OUT	HDMI signal input/output	
	UTP	RJ45 network interface	
	EDID	EDID Copy button, Press 3 seconds, copy EDID from HDMI IN display device to system .If HDMI IN interface no display connect, restore default EDID.	
	DC 5V	Power adapter socket	
	LED indicator	Description	
	PWR	System power indicator	
	STA	HDMI signal indicator	

6. Installation

- 1. Connect an HDMI cable between the HDMI input port of transmitter and the HDMI output port of the video source,
- 2. Connect the HDMI output port of receiver to the display device with HDMI cable,
- 3. Connect the transmitter UTP port to the receiver UTP port using a single CAT6 cable,
- 4. Connect the provided DC 5V power supplies to the power socket of the transmitter or the
- 5. EDID buttons purposes, such as connection after launch the PWR, STA indicator light, long PWR at the receiving end, the STA indicator light, long display no image or color, the transmitter power on the monitor of the HDMI port and transmitter HDMI port connection, long press EDID until the STA lights flashing, flashing stop and restart the power, 1-5 steps can be repeated.

 7. Diagram



8. Warranty

Please keep the user manual in a place where safety and easy to find so that you can read it immediately when meet problems. safety instruction:

A Safety instruction

- Please do not disassemble this product by yourself because it doesn't including DIY function.
- Please don't make the product touch water in case damaged, because it is Not waterproof design.
- Please use dry cloth material when clean the product surface.
- Please do not use this product in the environment of too wet or too high temperature.
- Please avoid contact with corrosive substances.
- When there is damage or other physical damage to the product, please stop using and contact with customer service to get support.

AI secured ltd

Address: United Kingdom Registration number: 05374981